

## Display screen operation instructions

- Shoulder arm pinch: Shoulder hand air massage
- Hip pinch: Hip air massage
- Leg airbag pinch: Foot air massage
- Air pressure + : Increase air strength
- Air pressure - : Decrease air strength
- Kneading mode: Neck massage
- Massage mode: Waist massage
- Mode selection: Massage direction
- Speed+: Increase massage speed
- Speed-: Decrease massage speed
- Airbag Auto: Air massage
- Automatic back: Neck back massage
- Rebound: Back up
- Declination: Back down
- Knead the sole of the foot: Foot roller
- Hip massage: Vibration for hip
- Constant temperature hot compress: Waist heating
- Zero-G: Zero gravity massage
- Fully automatic: Automassage programme  
F1/F2/F3/ F4/F5

## AI voice usage instructions

AI wake-up word list	AI intelligent response list	
Hi	Message chair	I'm here
Message open	Message closed	got it, Massage open
Change massage mode	Speed fast	got it, Massage closed
Speed slow	Foreward	got it, Change massage mode
Backward	Zero gravity	got it, Speed fast
Airbag strengthened	Airbag weakened	got it, Speed slow
Back up	Back down	got it, Foreward
Back closed	Start hip massage	got it, Backward
Hip massage off	foot roller on	got it, Zero gravity
Stop foot roller	Heating on	got it, Airbag strengthened
Heating off	Restart massage	got it, Airbag weakened
Stop massage		got it, Back up
Restart massage		got it, Back down
		got it, Back closed
		got it, Start hip massage
		got it, Hip massage off
		got it, foot roller on
		got it, Stop foot roller
		got it, Heating on
		got it, Heating off
		got it, Stop massage
		got it, Restart massage