

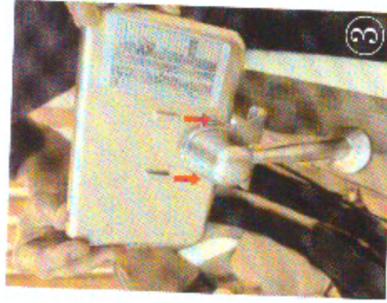


Install controller holder


- Step 1: Put the holder in to the hole;
- Step 2: Turn clockwise to the end;
- Step 3: Put controller on it.

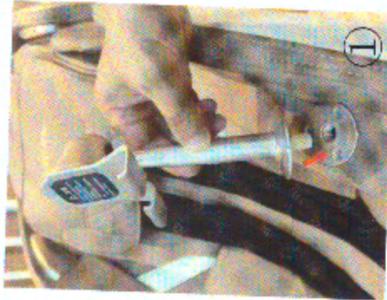

LCD controller

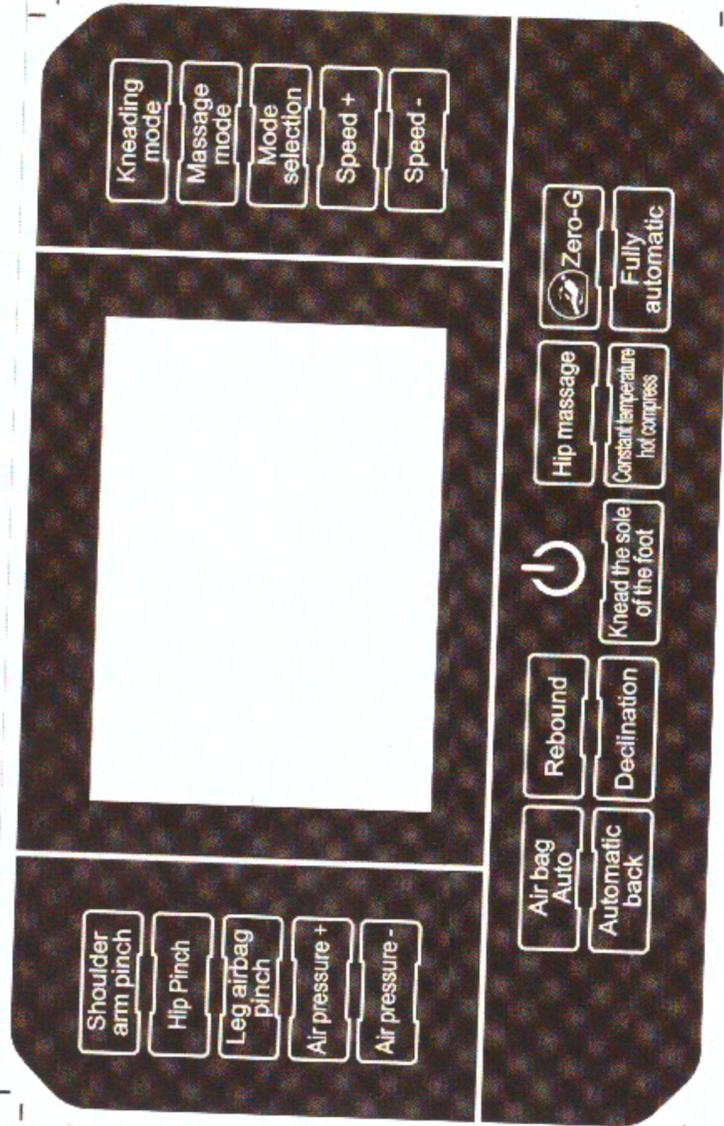

Shortcut Key Operation Instructions

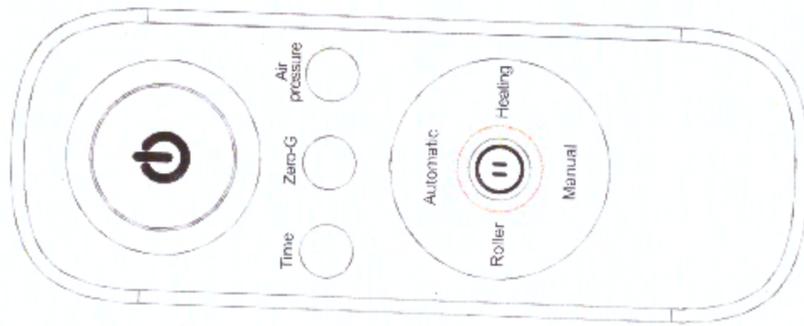

Button name	Function description
	Rotating this key, the chair will be in the rising/descending state, when it goes to the satisfactory position, rotating the key to stop rising/descending.
Time	Each press increases the massage time by 5 minutes, with a maximum of 30 minutes.
Zero-G	Press this key to open / close the Zero-G massage state.
Air pressure	Press this key to turn on / off the Air pressure function.
	Press this key to turn suspend/open the massage function.

Button name	Function description
	When the power supply is connected, press it firstly to turn on the chair, and it works immediately for the default "A1" mode, and the default working time is 15min. Press it again to stop the massage, and the chair is to the upright position.
automatic	Press this key to switch the change the automatic program.
manual	Press this key to switch the manual program.
Roller	Press this key to turn on / off the roller function.
Heating	Turn on / off the constant temperature hot compress function of the specified part, subject to the current hot compress position of the equipment, and the hot compress is not adjustable.